

TREE AND PARKWAY PROTECTION

The general contractor must properly install tree and parkway protection. The purpose of this fence is to protect the trees and root systems from damage, either by vehicles or material storage. If you are unsure of how and where to install the fencing, call Community Development at 630-530-3030 and request an on-site meeting with an inspector. After installation, remember to schedule another inspection with the same department.

<u>Trunk Diameter</u>	<u>Tree Protection Zone Radius</u>
1" to 9"	5 Feet
10" to 14"	10 Feet
15" to 19"	12 Feet
Over 19"	15 Feet

INSTALLATION INSTRUCTIONS


Install tree protection by constructing a fence as directed. Utilize steel fence post material at 6'-0" O.C. Provide a continuous wood horizontal top rail screwed to the metal posts. Neatly stretch and secure orange plastic snow fence material to the top rail and vertical members (**a chain link fence is not permitted**).

This protective fence shall remain intact throughout the entire duration of the construction project. It is the sole responsibility of the general contractor to maintain the fence during the entire length of the project. Near the completion of the project and prior to removing the fence, call Community Development at 630-530-3030 to request an inspection of the parkway and permission to remove the fence. Call for this inspection before final landscaping begins.

CITY RIGHT-OF-WAY SHALL NOT BE USED FOR STORAGE OF ANY TYPE AT ANY TIME

Construction Site:

- Heavy Duty Metal Stakes @ 6'-0" O.C. Max
- Continuous 2" x 4" Wood Top Rail
- 2" x 4" to be screwed to the heavy duty stakes
- Fencing to be sandwiched between 2" x 4" top rail and 1" x lumber secured with screws (plastic zip ties are not acceptable).

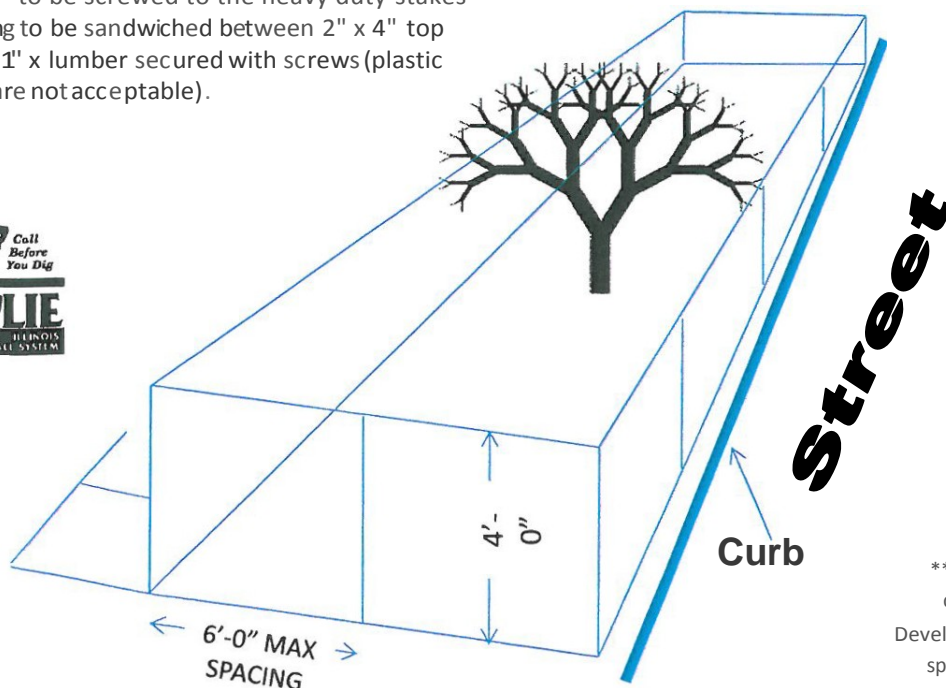

**Corner Lots- Please contact Community Development Department for specifications on fence